


## **GSM Intercom Instructions.**



- 1. Most important is to check that the SIM card you have is functional and that if it has a PIN Number that this has been permanently removed.**
- 2. Place the SIM in any phone of the SAME network as the SIM Card !!! Very Important.**
- 3. Check that the SIM card connects to the network and that it can send and receive SMS's and also make and receive voice calls.**
- 4. All new SIM cards should also be able to connect to the internet so if the phone you are using to test is capable then check to see if it connects to the internet.**

### **After testing the SIM card.**

- 1. Remove the screws from the white box GSM Unit with Aerial and open the lid.**
- 2. Open the SIM card holder and place the SIM in the holder, Make sure the holder clips closed.**
- 3. Connect the + Positive and - Negative as below.**

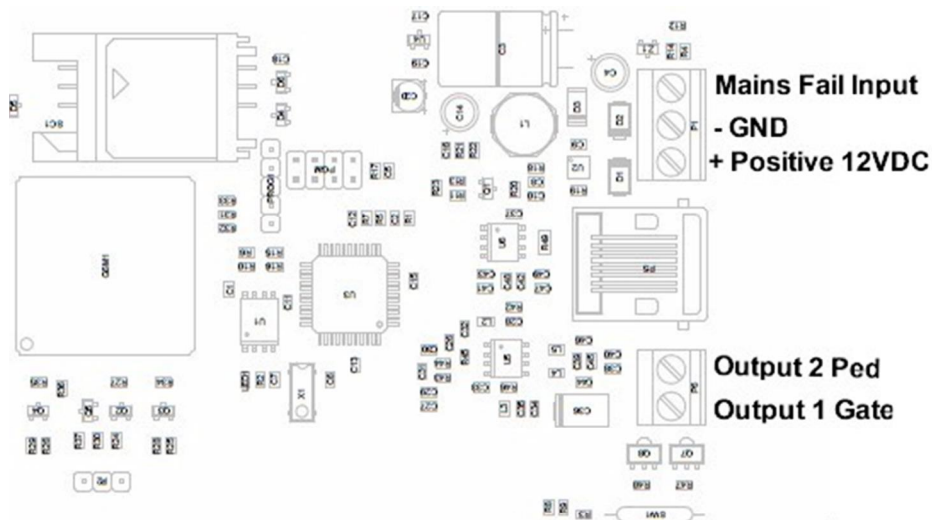

4. After a few seconds the Network LED wil come on then start to flash fast ( 1 per second ) the when it has connected to the network it will flash slowly. ( 1 every 3 seconds ).
5. If you are using one of our power supplies connect mains fail as well.
6. Once the OK LED is ON you can close the GSM Unit white Box.
7. Plug in the keypad using the adaptor to join the 2 cables.
8. Press button 1 to communicate to Manufacturer to test unit.

Once unit is tested the Manufacturer will program numbers ETC for you over the air.

During a call Output 1 ( Main Gate ) is activated by pressing 2 on your cell phone and output 2 ( Pedestrian ) press 8.

The outputs use the common Ground from a 12 VDC gate motor.





### **Features.**

- **4 Buttons call 4 different numbers.**
- **2 Outputs for gates to open either Main gate or Pedestrian.**
- **Control outputs from phone keypad.**
- **Waterproof Speaker**
- **Mains Fail / Restore SMS**
- **Tamper SMS**
- **Low Battery SMS. Can also request Battery Voltage.**
- **Drop Call gate opener Feature for Registered Guests.**
- **Non Drop Call Registered Guests can operate gate with password from their Phone Keypad.**
- **If used with Prepaid will SMS balance daily, weekly or every 2 week's.**
- **Easy Programmable over the Air via SMS.**
- **12 to 16 VDC Operation.**
- **Easy Installation with Optional Rain Shield and Goose neck Pole.**
- **Various Power Options available including Solar.**
- **Check signal strength via SMS.**

**Also Available Free Standing units complete with Battery and Solar Panel  
with Solar Charger.**



**For assistance call 0784568288.**

**[www.fine.co.za](http://www.fine.co.za)**