


尺寸:290X105mm 2025.2.24

Product Manual

Product packaging includes:
main unit, back clip, data cable, charger (optional), certificate of conformity, warranty card, and instruction manual.


Getting Started Guide
1. Product Component Names

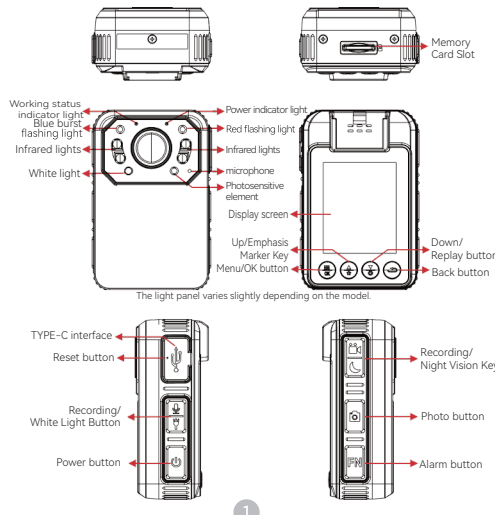

Working status indicator light, Blue burst flashing light, Infrared lights, White light, Power indicator light, Red flashing light, Infrared lights, microphone, Photosensitive element, Display screen, Up/Emphasis Marker Key, Menu/OK button, Down/Replay button, Back button, TYPE-C interface, Reset button, Recording/White Light Button, Power button, Recording/Night Vision Key, Photo button, Alarm button, Memory Card Slot.

The light panel varies slightly depending on the model.

2. Indicators on the LCD screen

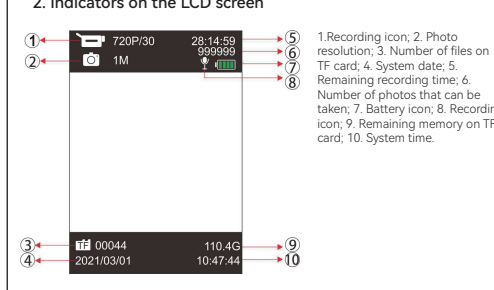

1. Recording icon; 2. Photo resolution; 3. Number of files on TF card; 4. System date; 5. Remaining recording time; 6. Number of photos that can be taken; 7. Battery icon; 8. Recording icon; 9. Remaining memory on TF card; 10. System time.

3. Device Charging

Low Battery Display: When the battery voltage is too low, the battery icon in the upper right corner of the display will turn red, and the screen will intermittently display the message "Low battery, please charge promptly" accompanied by a prompt sound. The device will automatically shut down after 5 minutes. Please charge the device promptly when the battery is low to avoid affecting your use.

1. Connect the device to the charger for charging;
2. Connect the device to the computer for charging;

As shown in the image above, connect the device to the computer using a Type-C data cable for charging. During charging, the status indicator light will be green, the power indicator light will be blue, and the indicator lights will turn off when charging is complete.

4. Power on: With the device off, briefly press the [Power On/Off] button to power on. After powering on, the preview screen will appear, and the working status indicator light will be green. If no operation is performed, the device will automatically enter screen saver mode after 30 seconds of power-on. After recording starts, the device will automatically enter screen saver mode after 30 seconds of recording.

5. Power off: With the device powered on, press and hold the [Power on/off] button to power off. All indicator lights will turn off. Press the [Power on/off] button briefly to enter screen saver mode.

6. Standby: When powered on, if no operation is performed, the device will automatically enter screen saver mode after 30 seconds. The screen will be off, and the status indicator light will be green. Pressing any button will turn on the display. 7. Menu Settings: In standby mode, briefly press the [Menu] button to enter the menu settings interface. In the menu interface, use the [Up] or [Down] button to select the desired item, and press the [OK] button to confirm the option. Use the [Up] or [Down] button to change the option. After setting, press the [OK] button again to confirm, and the device will automatically save the settings. Detailed system options are not listed here. The screen display is as follows:

7. Menu Settings In standby mode, briefly press the [Menu] button to enter the "Menu" settings interface. Once in the menu interface, use the [Up] or [Down] button to select the item you want to set, and press the [OK] button to confirm the option. Use the [Up] or [Down] button to change the option. After setting, press the [OK] button again to confirm, and the device will automatically save the settings. Detailed system options are not listed here. The screen display is as follows:

menu	
Video resolution	720P/30
Photo burst	1M
Time-lapse video	off
Super Storage	on
Loop recording	off

• Video Resolution: Press the [OK] button to enter the editing state. Press the [Up] or [Down] button to select. Options include 4K, 1440P, 1296P, optional configuration, subject to the actual product sold), 1080P, 720P, 480P. After selecting the desired resolution, press the [OK] button to confirm.

• Photo Resolution: Press the [OK] button to enter the editing state. Press the [Up] or [Down] button to select. Options include 1M, 2M, 4M, 26M, 34M, 48M, 58M. The default is 1M. After selecting, press the [OK] button to confirm.

• Burst Photo Capture: Press the [OK] button to enter the editing state. Press the [Up] or [Down] button to select. Options include: Off, 3 shots, 5 shots, 10 shots. The default is Off. After selecting, press the [OK] button to confirm.

TYPE-C charging mode (input voltage DC5V-1A)

The light panel varies slightly depending on the model.

• Time-lapse recording: Press the [OK] key to enter the edit mode, then press [Up] or [Down] to select the option (Off, 5 seconds, 30 seconds, 1 minute, 5 minutes). The default is Off. Press [OK] to confirm.

• Super Storage: After enabling, it reduces image quality, decreases memory usage, and extends storage duration. Press [OK] to enter the editing state, then press [Up] or [Down] to select. Options are on or off, with off being the default. Press [OK] to confirm.

• Loop recording: When enabled, it automatically overwrites old recordings when memory is low. Tap OK to enter edit mode. Options: On, Off (default is Off). Tap OK to confirm.

• Segment time: Press [OK] to enter the edit mode. Press [Up] or [Down] to select the segment length (5, 10, 15, 20, or 30 minutes), with 5 minutes as the default. Press [OK] to confirm.

• Motion Detection: When enabled, the system will automatically start recording for 10 seconds when an object moves in front of the camera during standby mode. If no movement is detected within 10 seconds, recording will stop after this period. If movement continues, recording will resume until no movement is detected again, after which recording will be turned off. To modify settings, press the [OK] key to enter the modification state, then select [Up] or [Down] to choose between "On" or "Off" (default: Off). Confirm your selection by pressing [OK].

• Screen protection: When enabled, the screen will automatically turn off after the set time and can be reopened by pressing any key. Press the [OK] key to enter the edit state, then press the [Up] or [Down] key to select options (default: 30 seconds, 1 or 2 minutes). Press the [OK] key to confirm.

• Auto shutdown: Press [OK] to enter the pending state, then press [Up] or [Down] to select options such as 3, 5, or 10 minutes. The default is 3 minutes. Press [OK] to confirm after selection.

• Voice prompt: Press [OK] to enter edit mode. Press [Up] or [Down] to select options (on or off). The default is on. Press [OK] to confirm.

• Exposure compensation: Press [OK] to enter the editing mode, then press [Up] or [Down] to select the value (options: +3, +2, +1, 0, -1, -2, -3; default: 0). Press [OK] to confirm.

• Video audio: Press [OK] to enter edit mode. Press [Up] or [Down] to select options (on or off). The default is on. Press [OK] to confirm.

• Volume adjustment: Press [OK] to enter the editing state, then press [Up] or [Down] to select the volume level (low, medium, high). The default is medium. Press [OK] to confirm.

• Car mode: Press [OK] to enter edit mode. Use the [Up] or [Down] arrow keys to select options (on or off). The default is off. Press [OK] to confirm.

• Virus Firewall: When enabled, your computer will not be infected with viruses when used as a USB drive. Press [OK] to enter the edit state, then press [Up] or [Down] to select the option (On or Off).

Both are off by default. Select and click OK to confirm.

• Password protection: Tap OK to enter the password input state. The default password is 6 zeros and can only be changed after entering the password. Tap Up or Down to change the content. Options are On and Off, with Off as the default. Tap OK to confirm after selection.

• Change password: Press the [OK] key to enter the password input state. The default password is 6 zeros. Enter the current password to change it. Press the [Up] or [Down] key to adjust the content. Press [OK] to confirm after entering.

• Close-up mode: When enabled, the recording will not display audio prompts or indicator lights. Press the [OK] key to enter the edit state. Use the [Up] or [Down] keys to select the option (on or off). The default is off. Press [OK] to confirm.

• Infrared Control: Set to switch between day and night vision recording modes. In night vision mode, the image is in black and white with infrared lights on. Press the [OK] key to enter the dual-color editing state. Press the [Up] or [Down] key to select between manual and automatic modes (default: manual). Press [OK] to confirm.

• Device ID: Press [OK] to modify the status, press [Up] or [Down] to change the content. Press [OK] to confirm after entering.

• Officer ID: Press [OK] to modify the status, press [Up] or [Down] to change the content, and press [OK] to confirm after entering.

• Language settings: Tap OK to enter the editing state. Tap Up or Down to change the options. Options include Simplified Chinese, Traditional Chinese, and English. The default is Simplified Chinese. Tap OK to confirm.

• Voice prompt: Press [OK] to modify the status, press [Up] or [Down] to change the content, and press [OK] to confirm after entering.

• Date/Time: Press OK to modify the status, press Up or Down to change the content, and press OK to confirm after entering.

• Format: Press OK to enter edit mode. Press Up or Down to choose Cancel or Confirm. Press OK to confirm.

• Default settings: Press OK to enter edit mode. Press Up or Down to choose Cancel or Confirm. Press OK to confirm.

• Date label: Press the [OK] key to enter the edit state. Press the [Up] or [Down] key to select. Options are on or off, with off as the default. Press [OK] to confirm.

• Version: Press OK to view your device version.

8. Camera Shooting

8.1. Camera

To start recording, press or hold the [Record] button for 3 seconds in preview mode or power-off state. A red dot will begin blinking slowly in the top-left corner of the screen, with a red countdown timer displaying the recording duration. The working status indicator light will turn red and flash. To stop recording, press the [Record] button again. The working indicator light will turn green, and the video file will be automatically saved to the TF memory card. The screen will automatically return to the camera preview screen, and the recording will be named with the date and time, saved as an AVI file on the memory card. For viewing the recording, refer to the "View/Play Audio/Video" section.

8.2 Video Lock

During video recording, press and hold the [Up/Highlight] key to lock the current video. Press and hold the [Up/Highlight] key again to unlock it. The recording will not be interrupted. Locked videos will not be deleted when recording is paused.

9. Take a Picture

When the device is on, tap the [Take Photo] button in the preview screen to take a photo and save it automatically. A "click" sound will be heard during the process. Each button press takes one photo, which is named with the date and time, saved as a JPG file on the memory card. For photo viewing, refer to the "View/Play Video" section.

10. Record Separately

To start recording, press or hold the [Record] button for 3 seconds in preview mode or power off. The screen will display a recording icon and the work indicator light will flash orange. Press the [Record] button again to stop recording, and the work indicator light will turn green. The audio file will be saved to the TF card automatically, and the screen will return to the preview mode.

11. Infrared Night Vision Mode

By default, the infrared night vision function operates in "Manual" mode with the infrared light off and the filter switch set to color mode, ideal for daytime use. To activate night vision, manually switch to infrared mode: Press and hold the [Video/Night Vision] button during preview to turn on the infrared mode, which activates the red light and displays a black-and-white image. Release the button to deactivate the infrared mode, restoring color vision. The [Video/Night Vision] button also allows switching between day and night modes. For automatic switching, set the infrared control to "Automatic" in the menu, enabling the recorder to automatically activate infrared night vision based on ambient light levels.

12. File Delete

You cannot delete any audio or video files saved on the memory card on this device. You can only format the entire device.

delete .

13. Watch/Play Video

a. In standby mode, press and hold the [Down/Play] button to proceed
Go to the playback menu and use the up or down arrow keys
Select the desired option, as shown in the figure:
b. Click OK to view the playback list. Use [Forward]
Use the [Up] or [Down] key to select the file to play; Video Photo Recording
c. While playing, tap OK to pause or
Press the [Back] key to return to the parent menu.

14. Reset and Restart

If the device crashes or stops responding due to improper operation or other special reasons, you can use a pen tip, toothpick, or similar object to press the [Reset] key (note: do not press too hard) to reset. The device will automatically shut down after pressing the reset key. Restarting the device will restore the previous settings.

15. Indicator Light Description

- ① When powered on, the power indicator light stays green in the preview screen.
- ② When the camera is powered on in camera mode, the work indicator light turns red and flashes slowly.
- ③ When the device is powered on and in recording mode, the work indicator light turns yellow and flashes slowly.
- ④ When charging, the power indicator light turns green while the operational status light stays blue.
- ⑤ When charging after power-off, the power indicator light turns off and the operational status light displays blue.
- ⑥ When powered on, the work indicator light flashes red once for each photo taken.

16. Instruction for Flashing Lamp, White Light Lamp and Infrared Night Vision

- ① When powered on, press the [Alarm] button to activate the flashing lights. The device emits alternating red and blue flashes with an alarm sound, serving as an emergency alert. Press the [Alarm] button again to silence the alarm while the flashing lights remain on. Press the [Alarm] button once more to turn it off completely.
- ② When powered on, press and hold the [Recording] button to turn on the white light. The device emits a white beam for auxiliary lighting. Press and hold the [Recording] button again to turn off the white light.
- ③ When the device is powered on, long-press the [Record] button to activate the infrared night vision light, and long-press it again to turn it off.